AERATORS

SINK: Fitted with the dual spray aerator .
BASIN: Fitted with the all-directional aerator.



Sink - Dual Spray Aerator Twist to change



Basin - All-directional Tilt plate. ± 6° up to ± 10°.



ASTRO II SINK & BASIN MIXERS INSTALLATION INSTRUCTIONS

PRODUCT #	BATCH#

ATTENTION PLUMBER

To ensure the optimum performance and customer satisfaction please adhere to the following:

- Flush out all pipe work prior to installation.
- Installation shall be in accordance with the AS/NZS3500 series of standards.
 The maximum operating pressure within any building should not exceed 500kpa.
 Pressure above 500kpa can cause damage from water hammer, reducing life of appliances, taps and fittings and cause excessive noise in the plumbing system.
- Pressure over 500kPa will require a limiting valve.
- Inline strainer / filter must be installed in the line before the mixer to cover both hot and cold supplies (not supplied). Must be accessible.

TECHNICAL DATA

Suitable for use with high pressure water supply only.

Not suitable for gravity-fed water heaters, low and unequal pressure networks.

Minimum Water pressure for satisfactory operation: 150kPa
 Maximum Water pressure: 500kPa

Maximum hot water temperature: 70°C

If the Water temperature exceeds 70°C an approved Tempering Valve must be fitted.

WELS

• The flow rate of the sink and basin mixers has been rated under the Australian Water Efficiency Labeling Scheme (WELS).

Please leave this form with the product once installed.


For full warranty terms and conditions, please see the warranty card enclosed with this product or visit www.greenstapware.com/warranty-and-care/


Australia:

Distributed by: GREENS GLOBAL AUS PTY LTD

36 Naxos Way, Keysborough VIC 3173
Phone: 1800 244 487 Fax: 1800 244 212
Email: aussales@greenstapware.com
Website: www.greenstapware.com
Service Hotline: 1800 244 992

tline: **1800 244 992** #40187 09/22

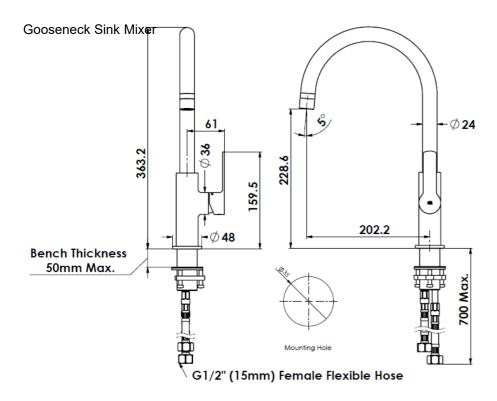

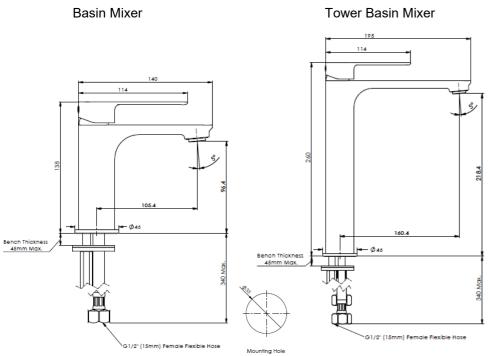

INSTALLATION INSTRUCTIONS

BENCH TOPS

- Formica/wooden bench tops, extra mounting support is required below the bench.
- Stainless steel bench tops ensure the mounting washer is against the S/Steel.
- Vitreous china tops additional sealant maybe required at the base of the mixer to ensure a water tight seal.

SINK MIXER

Note: Fits Maximum Bench thickness of 40mm.

To install mixer, cut a mounting hole 35mm in diameter in the bench surface.

- Unscrew mounting nut and remove steel washer and rubber washer from threaded mixer tail. Ensure seal is sitting in groove at base of mixer.
- 2. Position mixer in bench top with handle on the right.
- From underneath the bench install the rubber washer then the steel washer and screw mounting nut onto threaded tail of mixer and tighten the jacking screws.
 - a. Screws may require backing off before installing nut.
- Install inlet hoses:
 - a. Screw the "HOT" hose (red) and hand tighten into hot inlet (red) of mixer.
 - b. Screw the "COLD" hose (blue) and hand tighten, into cold inlet of mixer.
- 5. Connect flexi hoses to water supply.
 - The union nuts must be connected to 15mm thread fittings which have a machined end face with a chamfer, not "sawn off" threaded tube.
 - b. Do not over tighten the nuts.
 - i. Hand tighten then 1/4 turn with spanner.
 - Do not kink, stretch or twist, any bends in the flexible hose should have radius of no less than 85mm.
- Turn on water supply and check for leaks.

BASIN MIXERS

Note: Fits Maximum Bench thickness of 45mm.

To install mixer, cut a mounting hole 35mm in diameter in the bench surface.

- 1. Unscrew mounting nut and remove steel washer and rubber washer from mounting thread.
- 2. Check the M8 mounting thread is tight into base of mixer.
- 3. Ensure **seal** is sitting in groove in the base flange of mixer.
- 4. Lower mixer with fitted hoses into the mounting hole and position mixer in bench top.
- 5. From under bench, install the **rubber washer** then the **steel washer** over mounting thread and screw the **mounting nut** to mounting thread.

Tighten with 11mm tube spanner and secure the mixer to the bench.

- 6. Connect flexi hoses to water supply.
 - a. The union nuts must be connected to 15mm thread fittings which have a machined end face with a chamfer, not "sawn off" threaded tube.
 - b. Do not over tighten the nuts.
 - i. Hand tighten then 1/4 turn with spanner.
 - c. Do not kink, stretch or twist, any bends in the flexible hose should have radius of no less than 85mm.
- 7. Turn on water supply and check for leaks.