



ASTRO II WALL BASIN / BATH MIXER INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #

ATTENTION PLUMBER

To ensure the optimum performance and customer satisfaction please adhere to the following:

- **Flush out all pipe work prior to installation.**
- Installation shall be in accordance with the AS/NZS3500 series of standards.
The maximum operating pressure within any building should not exceed 500kpa.
Pressure above 500kpa can cause damage from water hammer, reducing life of appliances, taps and fittings and cause excessive noise in the plumbing system.
- Inline strainer / filter must be installed in the line before the mixer to cover both hot and cold supplies (not supplied). Must be accessible.

TECHNICAL DATA

- **Suitable for use with high pressure water supply only.**
Not suitable for gravity-fed water heaters, low and unequal pressure networks
- Minimum Water pressure for satisfactory operation: 150kPa
- Maximum Water pressure: 500kPa
- Maximum hot water temperature: 70°C
If the Water temperature exceeds 70°C an approved Tempering Valve must be fitted.
- The flow rate of the basin mixer has been rated under the Australian Water Efficiency Labeling Scheme (WELS).

Please leave this form with the product once installed.


For full warranty terms and conditions, please see the warranty card enclosed with this product or visit www.greenstapware.com/warranty-and-care/

Distributed by: Greens Global AUS PTY LTD

36 Naxos Way, Keysborough VIC 3173
Phone: 1800 244 487 Fax: 1800 244 212
Email: aussales@greenstapware.com
Website: www.greenstapware.com

Service Hotline: 1800 244 992

#42163 10/22

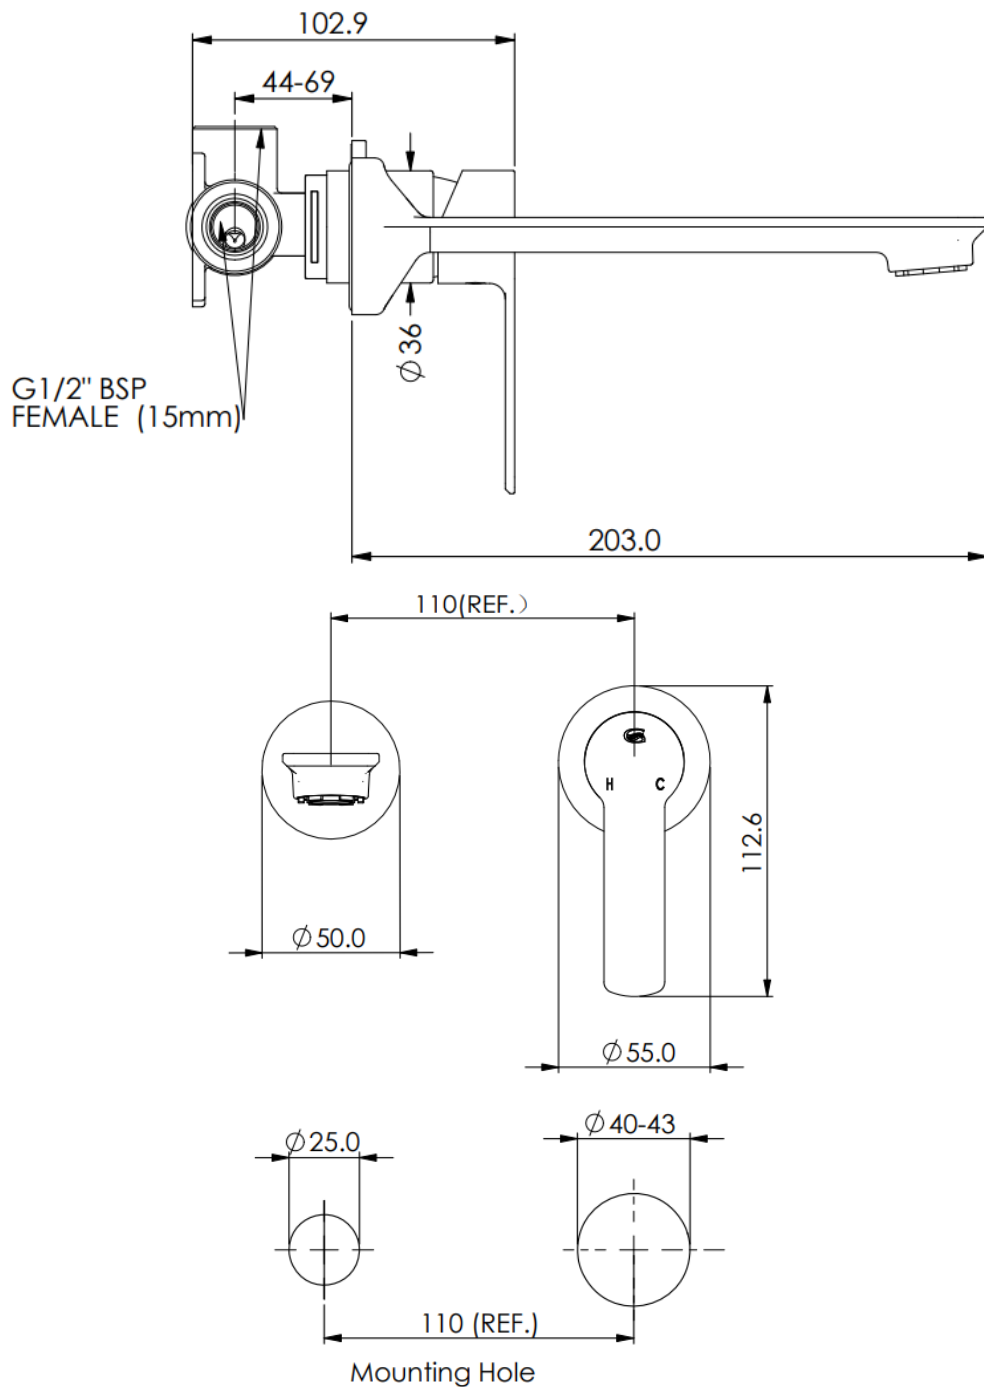

NOTE:

- Valve body mounting 44-69mm behind finished wall
- Finished wall cut-out: Mixer 40-43mm dia round. pout 25mm dia.

Installing Mixer Valve Body:

1. **15mm Female** inlets & outlet.
 - a. Hot inlet (left), Cold inlet (Right).
 - b. Outlet (Top).
2. **44mm - 69mm back of valve body to the finished wall.**
3. Finished wall cut-out : **Mixer 40-43mm dia round, Spout 25mm.**
4. Do not pressure test with valve in the open position when the outlet is closed.

Installing Bracket Elbow For Spout (not supplied):

1. Install a **brass 15mm male wingback elbow** for spout position and connect water supply from mixer outlet to elbow.
 - a. Drawing 110mm (REF) is for guide only.
 - b. **Check alignment of body and wall elbow.**
 - c. Note: **MIN 10mm of thread** from finished wall for spout
2. Plug off elbow for water test.
3. Turn on water supply on and check for leaks.

Install Face Plate & Handle:

1. Remove the mud guard by removing screw.
2. Push on sleeve and screw on cover cap.
3. Remove protective tape from the seal. Position plate against wall with drain hole at the bottom.
 - a. Sealant will be required behind faceplate on uneven surfaces for water seal.
4. Install handle with the 2.5mm Allen key supplied and fit button.

Installing Spout:

1. Cut out mounting hole in finished wall for **spout 25mm** as per drawing.
2. Cut inlet thread to length and install spout.
 - a. **MIN 10mm thread from finished wall.**

WELS & Bath Installations:

Mixer is set up for basin installations with a 5 Star rating 6.0 l/m aerator.

For bath installations remove the 5 star rated aerator by unscrewing anti-clockwise and replace with flow straightener, using tool supplied.

